

INSTRUCTION

Lesen Sie diese Hinweise sorgfältig vor der Benutzung und bewahren Sie die Bedienungsanleitung auf!



Articles for baby and child

3 Tec

- 3-wheeled stroller with seatunit
- including carry cot
- height adjustable handle
- swivable and lockable front wheels
- suitable from 6 months to 3 years (max. 15kg) incl. carry cot from date of birth (max. 15 kg)
- 4-times adjustable backrest
- weight: 15,2 kg
- tested according to EN 1888 : 2005

WARNING:

This stroller is no sport vehicle and may not used for jogging or inline-skating.

Intertek Labtest

Dear Customer,

Congratulations on the purchase of your ABC-Design Stroller. We are pleased that you have chosen one of our products and hope that you will be completely satisfied with the service you receive from the product. We advise you to read the Instruction Leaflet carefully before use of the pram and then to keep it in a safe place. If you fail to do this the safety of your child can be jeopardised. Kindly pay attention to the washing and care instructions so that you enjoy long and trouble free use of your new purchase.

Your ABC-Design Team

Hints for care and use



1. The manufacture of materials used in the fabrication of this product meet the standards required by the AZO, EN71-2 und EN71-3. for clothing claimed light originality values. However, we advise you not to expose the product to the sun for a long time. Attrition and fading of colours during heavy solar radiation do not justify a damage claim. The fabric case of your stroller is washable. You can wash the case by hand or machine cold wash.
2. Each product frame is manufactured according to EN 1888: 2005 standards. To maintain the safety of your product, the moving components must be lubricated regularly and if required rivetted.
Look out: Use only silicon-oil or silicon-spray for oiling.
3. Regular care and maintenance contribute to the safety and longevity of your product. Environmental influences such as salty air, road strewn salt or acid rain as well as outdoor storage contribute towards corrosion. Therefore always store your pram indoors.
4. We recommend regular maintenance of all varnished components. Should the frame and varnished components become soiled use a damp cloth moistend with water diluted mild detergent to wipe away the dirt.
5. Damaged air tubes are no reason for reclamation. Spare tubes can be bought in all retail shops.

By adhering to the aforementioned hints you will enjoy satisfactory use of your ABC-Design product for a long time

1. Open the stroller

Move up the front part until it is locked.
Move up the handle until the frame is locked completely.

WARNING: Please make sure that all locks are closed before using.

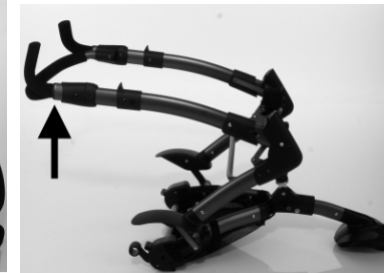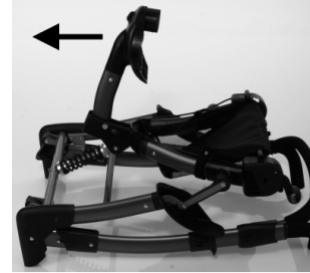

2. Installation of the wheels



Put the rear wheels on the axles until it is locked.

For removing the wheels you have to put down the handle as shown on the right picture, that the wheel is released.

Now you can take down the wheel from the axle.

For the installation of the front wheel block put the wheel on the front part of the fork until it is locked.

For removing the wheel block press the button located on the wheel block surface.

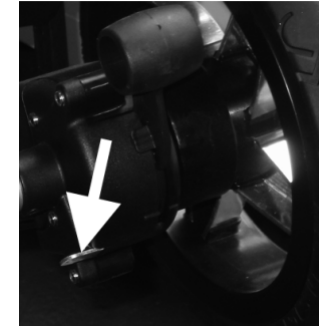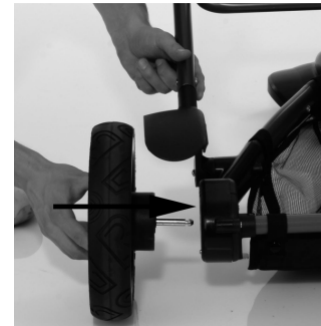

3. Installation of the swivelling wheels

Move the lever for fixing the wheels to the left hand side.


For the swivelling position move the lever to the right hand side.



4. Fixing and removing of the breaking system

For fixing the break push the lever down.

For releasing the break, pull the lever up.

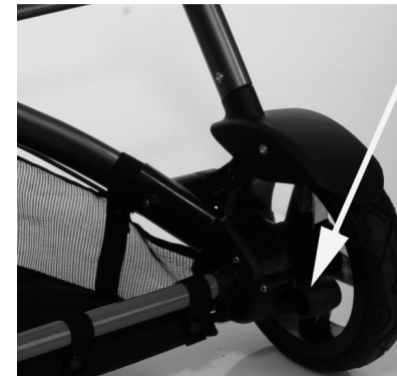

5. Fixation seat unit

Please fix the seat unit onto the frame as shown on the pictures.

Please make sure that the seat unit is correctly locked onto the frame.



WARNING: Please use the seat unit only in the driving direction as shown on picture



6. Fixing and removing of the bumper

For fixing the bumperbar please take it into both plastic fixations on the left and right side as shown on the stroller.

For removing the bumper from the stroller turn both clips to the inner side and pull the bumper to the front.




7. Adjustment of the leg support

For adjusting the leg support push both buttons on both sides. Fix the legrest in releasing both buttons.



8. Belt locking


For locking the belt put both plastic parts (1) together until it locks.

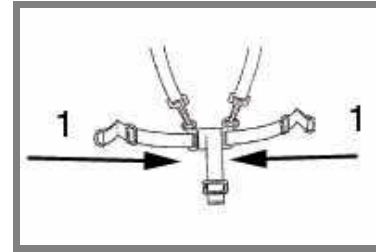

9. Belt opening

For belt opening, put both plastic parts together (1) and then pull it apart (2).


WARNING: Please use the pelvic belt together with the crotch belt

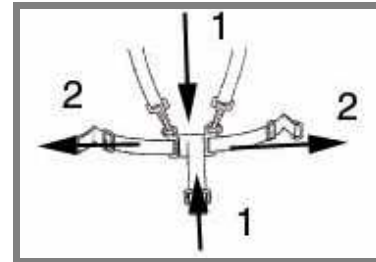

10. Seat unit adjustment

For adjusting the seat unit, pull the lever on the rear side to the top and adjust it.

When you have reached the requested position let off the lever and it locks automatically in the position you want.

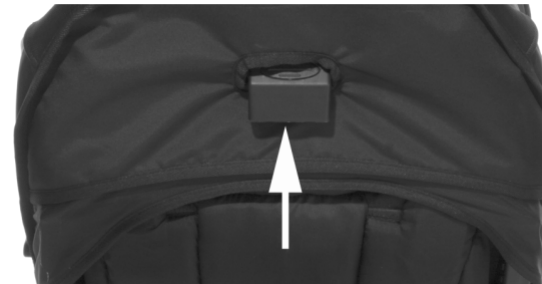

11. Unfold the carry-cot

Lift the sides of the carry-cot.
Fix the sides firmly in place by pushing both steel braces into their respective pockets.
Make certain that the braces are both properly locked in place.



12. Assembling of the adaptor

Put the adaptor onto the carry cot like shown on the picture.



13. Fitting the mattress

Place the mattress in the cover.
Press the mattress right down onto the floor of the carry-cot.



14. Adjust of the carrying handle

To adjust the carrying handle, you must press the buttons on the two sides as shown on the photo.
Now you can adjust the carrying handle.



15. Fitting the leg-cover

Feed the closed end of the leg-cover over the bottom end of the carry-cot
Pull the leg-cover towards the head end of the carry-cot.

Fasten the ends of the leg blanket to the outside of the cover with the velcro provided for it.



16. Fixation of the carry cot on the stroller

Put the carry cot on the stroller frame until it is fixed completely on the frame.




For removing the carry cot from the frame pull the lever upwards, and move the cot slightly from the frame until it is removed completely.

Attention: Check carefully that the carry cot is fixed on the frame properly.



17. Adjustment of the handles

For adjusting the levers in height press the buttons as shown on the picture. If you have reached the requested height of the handle release the buttons and wait until it locks.

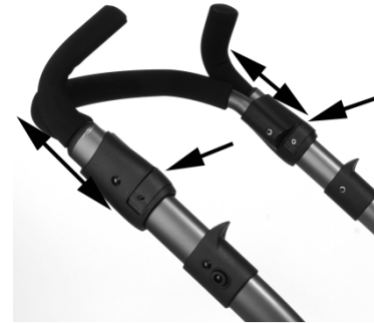

18. Folding the stroller

For folding the stroller push the button as shown on the picture (1). Move both levers up (2).


Move the handle down as shown on the picture.

Pull both levers located on the front wheel frame to the front.

Push the front part to the inner side.

REMARK: For opening the stroller again, see point one „open the stroller“.

WARNING: Please make sure that all locks are closed before using.

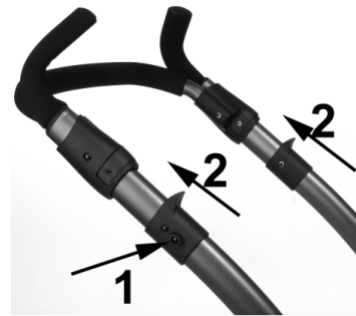

Hinweise

für den Reklamationsfall

- Please read this instruction carefully before using the stroller. If you don't pay attention to these instructions, the safety of your baby can be in danger.
- This stroller is suitable for babies from the age of 6 month (by using a carry cot from date of birth) till the age of 3 years and a weight up to 15 kg.
- **WARNING:** Never leave you child unsupervised in the stroller!
- **WARNING:** Please make sure that all locks are closed before using.
- **WARNING:** Please use the seat unit only in the driving direction
- **WARNING:** Always use the safety belt when your child is in the stroller.
- The mesh basket is suitable for a maximal weight of 2 kg.
- This stroller is suitable for one baby.
- The brakes have to be fixed, while taking the child in or out.
- **WARNING:** Please use the pelvic belt together with the crotch belt
- **WARNING:** If you carry the stroller up- or downstairs always take your child out of the stroller.
- **WARNING:** When using the carry cot please make sure that the carry cot is fixed in the right way.
- From time please check loosen parts regularly and lock it again.
WARNING: If you place heavy weight at the handle, the stability of the stroller is in danger
WARNING: Keep away from fire
WARNING: This stroller is no sport vehicle and may not used for jogging or inline-skating.
- Do not use a Kiddyboard, the stroller is not approved for use of a Kiddyboard.



Articles for baby and child

Hinweise

für den Reklamationsfall

- Normal problems regarding to years of wear and damages through heavy uses is no reason for reclamation.
- Damages which are caused by wrong using of this product are no reason for reclamation.
- Damages through wrong installations are no reason for reclamation.
- Flat air tubes caused through long time standing periods are no reason for reclamation.
- Flat air tubes caused by nails, glass fragments, etc. are no reason for reclamation.
- Damages through wrong using of the stroller are no reason for reclamation.
- Parts of rust caused by missing servicing are no reason for reclamation.
- Scratches are normal damages and are no reasons for reclamation.
- Damp textile parts, which can't be dried or mouldy parts, are no reason for reclamation.
Through sun intensity, sweat, cleansing agent, rub-downs or often washings, the fabric colour can fade out. and this is also no reason for a reclamation.
- Used wheels are normal damages and are no reason for reclamation. This is also no reason for a reclamation.
- Used wheels are normal damages and are no reason for reclamation.



Articles for baby and child

ABC Design GmbH
Dr. Rudolf-Eberle-Str. 29
D-79774 Albruck